

MB 452MK

External Removable Hard Drive Rack



User Manual

 
<1.>Contents Description



©Whole Unit
(External Removable
Hard Drive Rack)



©User manual

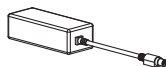

©External Power Adapter AC/DC



©6#-32 4x HDD screws 2x keys

 


©e-SATA cable (MB452MK)



©USB Converter cable
(A type to B type)


<2.>Appearance

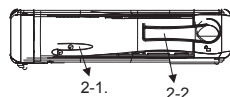


2-1. **LED Indicator**
Power: Green LED
HDD access: Orange LED



 2-2. **Active handle**
A: Protect the hidden key lock
B: Enable the handle to pivot and
allow the handle to clamp
C: Enable to pull out the cartridge

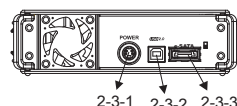

 2-3-1. **Power port**
2-3-2. **USB 2.0 port**
2-3-3. **SATA port**

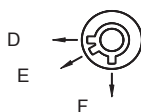


2-4. **Segment Key Lock Description**
D: Power On / Locked
E: Power Off / Locked
F: Power Off / Unlocked




2-5. **Foldable foot stand**


<3.>Installation Guide

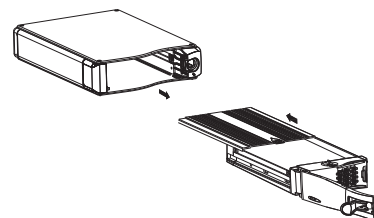


3-1. Pull the active handle of the tray until segment C (refer to 2-2). Press the adjoining section of the active handle and handle pulling the handle to remove the tray from the external housing. Push the release latch to remove the top cover by sliding backwards.

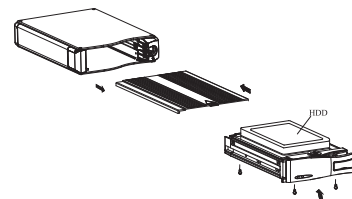


3-2. Place the HDD inside the tray and connect the interface and power connectors to the HDD. Secure the HDD to the tray using the screws provided (check the accessory bag). Place the top cover back to the tray. Slide forward to secure. In case of SATA HDD, slide the HDD backwards for connection to the tray.

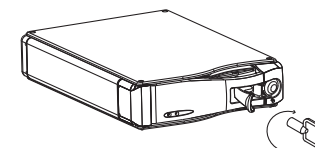

3-3. Insert the tray into the external housing and close the handle. Use the miniature key provided to secure the handle (refer to 2-5).

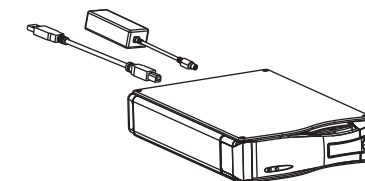

3-4. Connect the interface and power connectors to the external housing and to the source.

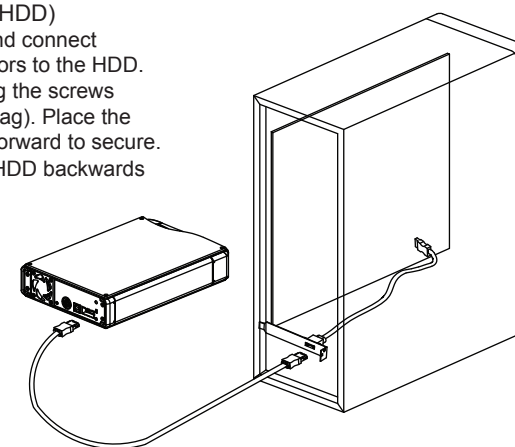

3-5. Optional 1 port eSATA PCI bracket w/ internal cables installation utilizing the MB452MK device.